

Content

Before Using

Safety Instructions.....	01
Precautions for Use.....	05
Parts Identification.....	07

Toilet Installation

Installation Guidance.....	09
Installation Steps.....	10
Hose Connection And Installation.....	12
Remote Control Installation.....	13
Trial Run.....	13

Instruction for Use

Side Control Panel Instruction.....	14
LED Display Screen Instruction.....	14
Remote Control Instruction.....	15
Usage Instruction.....	16
Automatic Sensing Function.....	18
Aromatherapy Adding Liquid Instructions.....	19

Appendix

Remote Control Battery Replacement.....	19
Backup Battery Replacement.....	20
Usage Instruction.....	21
Fault Judgement And Solutions.....	22
Daily Maintenance.....	24
Technical Support.....	25
List of Materials.....	26

Safety Instructions

Please read the safety instructions carefully before using.

The precautions listed here are important in relation to safety and should always be strictly observed.

The meaning of the diagram is as follows



Caution

It means that if this sign is ignored and product handled improperly, the users will be dead or be injured seriously.



Note

It means that if this sign is ignored and product handled improperly, the users will be injured seriously or subject to property loss.

Examples and descriptions of the Diagram



It means prohibition.
The left diagram indicates "Disassembly prohibited".



It means that it must be observed.
The left diagram indicates "strictly abide by".



Caution



No sprinkling

Do not spray water or detergent on the main body or electronic plug

- May cause fire or electric shock.
- May cause breakage or damage to the toilet seat or water seepage in the room.

This product belongs to electronic products, please do not install the product in an easily splashed or humid place. Please install an exhaust fan and other exhaust equipment to ensure unobstructed air flow in the bathroom

- Otherwise, it may cause a fire or an electric shock.

Please set the socket for power wiring as follows

- If the wiring is not as follows, it may cause a fire or electric shock
- a. Please use high inductance, fast type leakage switch (rated induction current below 10mA) or protect with insulated transformer (above 1.5KVA, below 3KVA) for the circuit of socket.
- b. The installation position of the socket must be more than 0.3m from the ground and as far away from the bathtub as possible.

The grounded wire equipped with the product must be grounded, please be sure to connect to the ground wire

- Otherwise, it may cause an electric shock.

Note: The grounding treatment mentioned here means that the grounding resistance is below 4Ω protective earthing and the grounding wire uses copper wire of 1.6 mm or more in diameter

When using in the bathroom

Please make sure power supply and the plug is sealed with silicone to prevent the water

- Otherwise, it may cause a fire or electric shock.

Caution



Do not use in humid places

Do not install this product in humid places such as Shower room.
(Prevent water from entering electronic components)

- May cause a fire or electric shock.



Disassembly prohibited

Never disassemble or repair or modify by yourself

- May cause a fire or electric shock.



Prohibit the touch with wet hands

It is forbidden to plug or unplug the power supply with wet hands

- May cause an electric shock.



Prohibition

Malfunctioning products are forbidden to use

- Under the following circumstances, please unplug the power supply and close the water valve to stop supplying water.



Prohibition

Do not damage the power cord and toilet connection line

Fault refers to:

- The main body or water pipe leaks water.
- The product is cracked or damaged
- There is abnormal noise or peculiar smell.
- The product smokes and abnormally hot.
- Toilet blockage

- Fault products are forbidden to use, otherwise, it may cause a fire or electric shock and even indoor water seepage, etc.

It is forbidden to pull, modify, heat, twist, place heavy objects on the power cord and toilet connection line.

- Damaged products are forbidden to use, otherwise, it may cause a fire or electric shock or short circuit.



Prohibition

Do not use loose or shaking power outlets

- May cause a fire or electric shock.



Prohibition

Do not use the multi-socket socket

- Please do not connect the wire or use the extension cord when using, it may lead to heat and cause a fire and electric shock.



Prohibition

Do not use water other than tap or drinking water

- Doing so may cause irritation to the skin and malfunction.

Caution



Required

Attention to prevent low temperature burns

- Please adjust the seat temperature to normal level when sitting for a long time.
- Please adjust the seat temperature to the normal stage, the wind temperature to the low level, when the following people use "thermal seat" and "warm air drying" functions.

- Children, the elderly, and other users who cannot adjust the appropriate temperature by themselves
- People with walking problems such as the sick and disabled
- Sleepy people who took medicines, sleeping pills, cold medicines, etc., with sleepy side effects, drank too much, got overtired, etc.



Caution



No fire

Do not keep cigarettes and other burning stuff nearby

- May lead to a fire.



Prohibition

It is forbidden to put your fingers or sundries at the warm air outlet
It is forbidden to touch the warm air outlet with hands or cover it with cloth

- May cause burns, electric shock, fire.
- Please be careful when children and the elderly using.



Prohibition

Do not apply force, stand on the seat ring, the flip lid or the main body, and heavy objects are forbidden placed on it

- May cause product to crack, the main body to fall apart, the person to be injured.
- Toilet may be damaged and indoor water seepage will occur.



Prohibition

When maintaining the plastic parts (top unit etc.) or the water supply hose, use a neutral kitchen detergent diluted with water. Do not use any of the following.

- Toilet cleaner, household cleaner, benzene, paint thinner, powdered cleanser or nylon scrubbing brush.
- These items may damage or crack the plastic and cause injury or malfunction.
- These items could damage the water supply hose and cause a water leak.



Prohibition

When opening the water inlet angle valve, do not remove, or rotate, open the water filter net

- May cause water leakage.



Prohibition

Do not bend or damage the water filter screen


- May cause water leakage.



Prohibition

Do not flush any sundries except excrement and toilet paper

- May cause the water closet to be blocked and the sewage will leak out of the room.

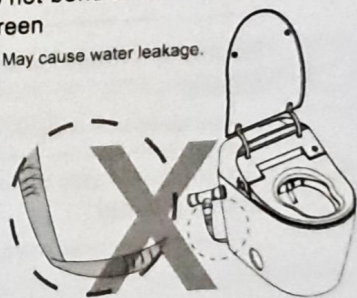

Required

Disconnect the power plug for a long time of not using.



Required

Close the water angle valve to stop supplying water when water leaking



Required

Prevent damage caused by freezing
• May cause damage to the water inlet configuration and the interior body, and leakage may occur.



Required

Tighten the water filter net when installing

- Otherwise, it may cause water leakage.

Please implement warming, to raise the rest room temperature



Required

Make sure the power plug in

- Ensure the power plug is plugged in before using, and the plug and socket fit closely without looseness or incomplete insertion
- Otherwise, it may cause a fire due to heat.
- Disconnect the power plug for a long time of not using



Required

When the toilet is blocked, unplug it and use a commercially available pipe unblocker to remove the blockage


- Otherwise, it may lead to sewage leakage and indoor water seepage when automatically cleaning.



Required

Do not install it in a place directly exposed to light



- May cause discoloration, aging, and deformation.

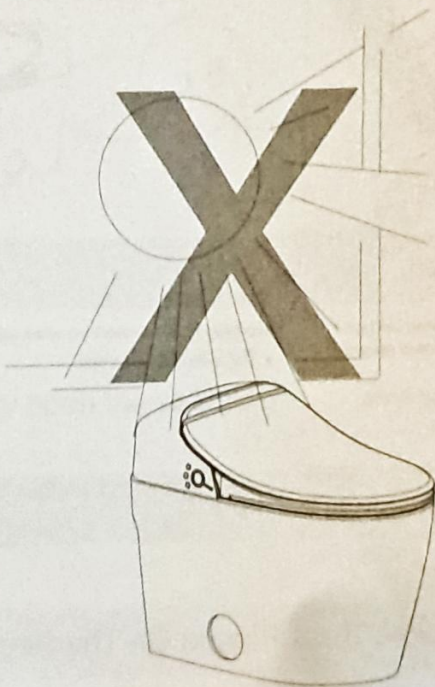

Precautions for Use

Cleaning Mistakes

 Do not wipe the main body with hard and coarse cloth or tools to avoid scratching.

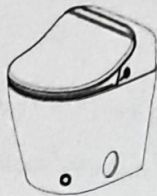


Avoid directly washing with water.




Daily Maintenance

Avoid splashing urine on the main body or spray nozzle.

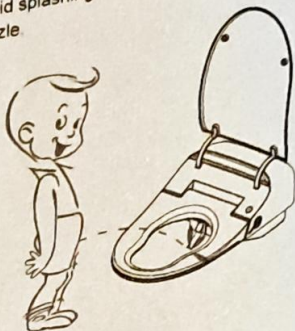

Pull out the power plug during the thunder storms.

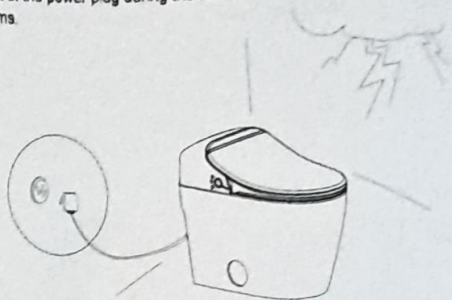

Improper Operation

Shall not cover the seat sensor, human infrared sensor, and the transmitting signal and receiving signal of the remote control.

- May cause the smart toilet misoperation.

Keep away from the main body when using the radio, etc.

- The radio may be garbled

Do Not Lean Back On The Flip Lid


- May cause crack.

Put Away The Child's Seat Placed On The Seat After Using

- May cause some functions unavailable.


Precautions for Use

Take anti-freeze measures to prevent freezing damage during the freezing night in winter.

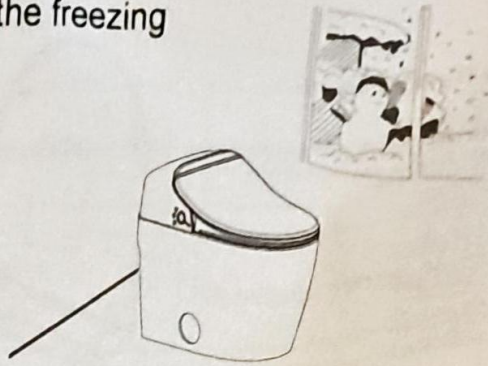


Do not put heaters near the main body.

- May cause discoloration or malfunction.


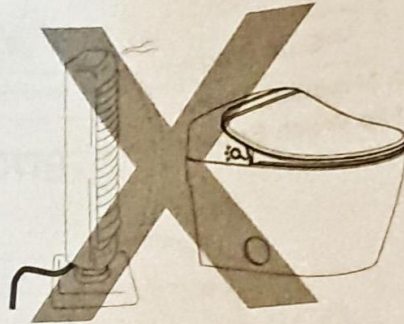


Do not roughly open the seat ring or flip lid



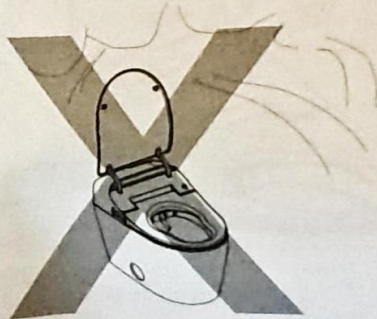




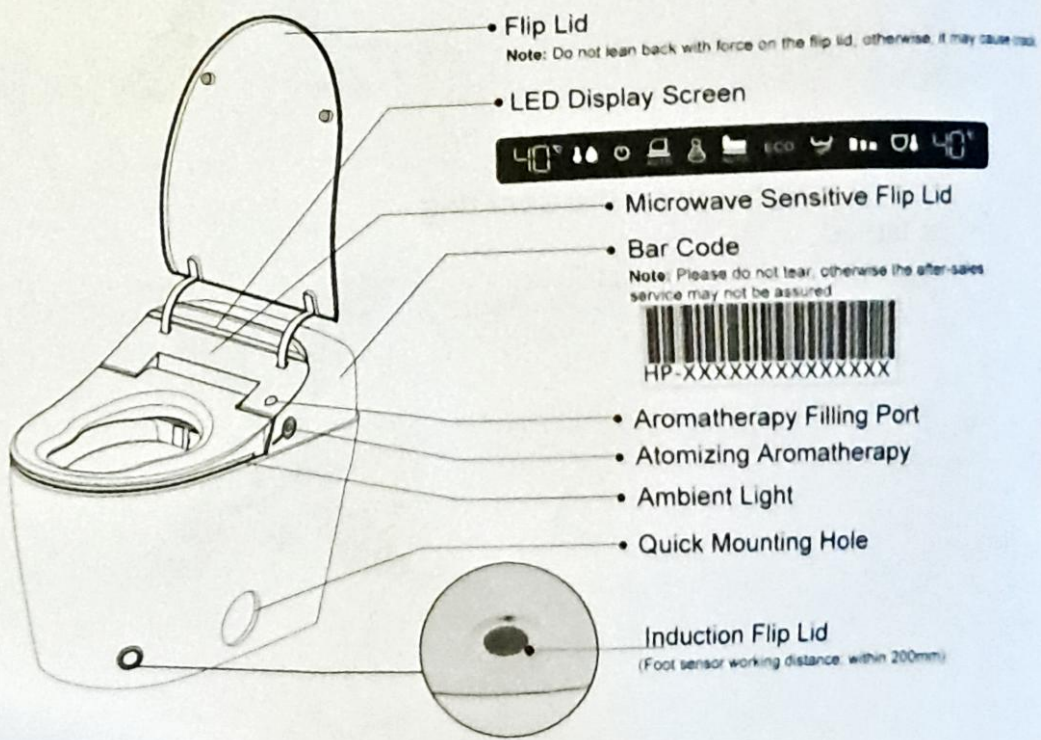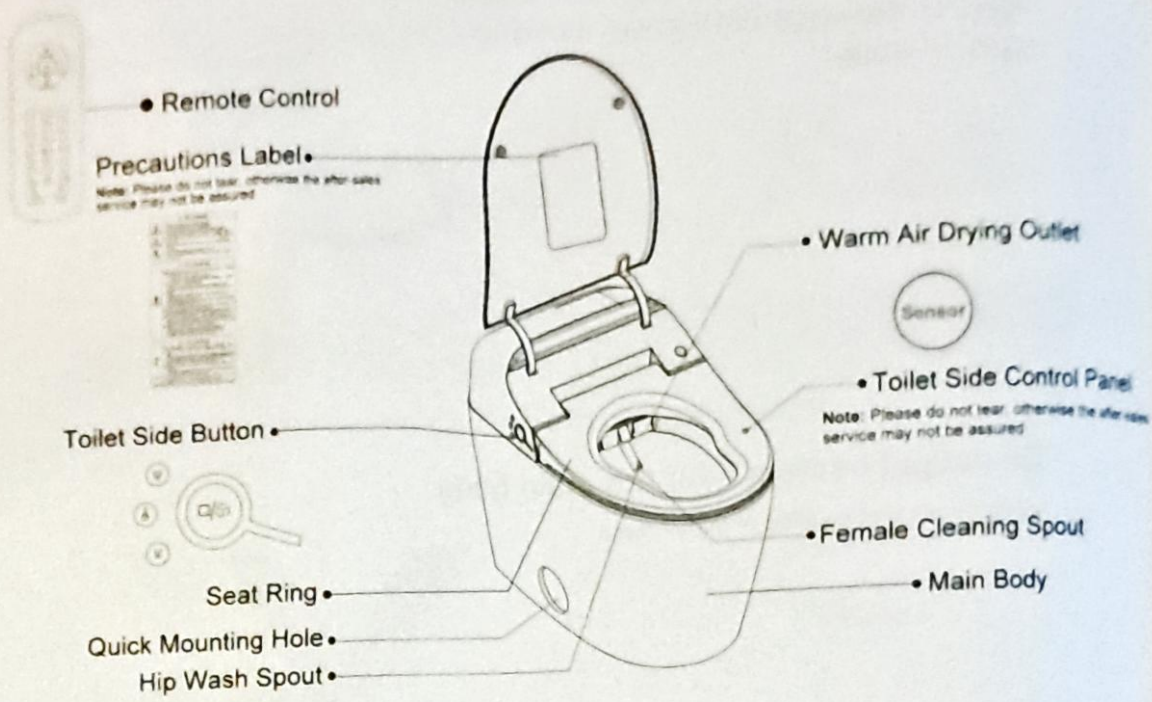




- May cause crack or malfunction.



 


 

Parts Identification






Main Functions

Female/Pulsate 	Rear/Pulsate 	Children/Pulsate 
Water Pressure 	Back/OFF Front/ON 	Flush/Auto Setting 
Water Temp 	Wind Temp 	Seat Temp 
Hot/Cold 	High/Low 	Dryer 

Humanized Functions

Self-clean 	Night Light 	ECO ECO
Setting/Pulsate 	Remote Control 	Automatic Lid Open 

 Humanized Functions

Earth Leakage Prevention 	Fireproof 	Antibacterial 
--	---	--

Installation Guidance

List of Materials

Screwdriver



Wrench



Marker




Tape measure



Glue gun



Installation drawings

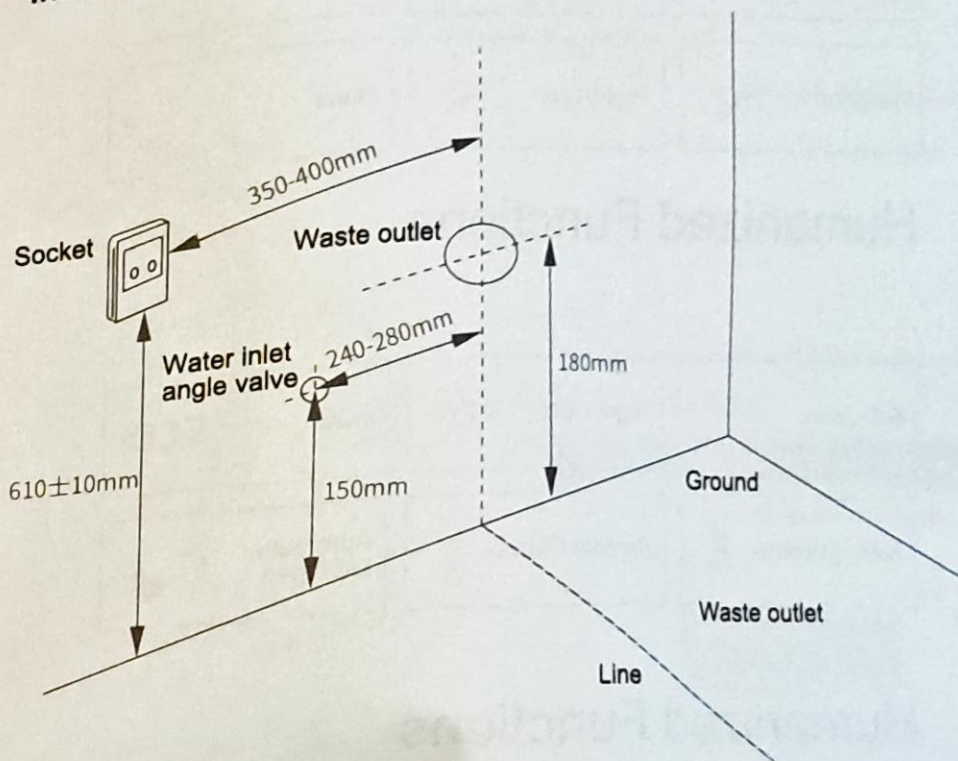


Caution

Please set the socket as follows

1. Ensure the socket properly grounded.
2. The power cord length is 15m and be located close to the socket, convenient to install and remove, and as far away from the bathtub as possible.
3. Use waterproof socket and don't use extension power cord to connect.
-May cause a fire or electric shock.

Size Drawings

unit:

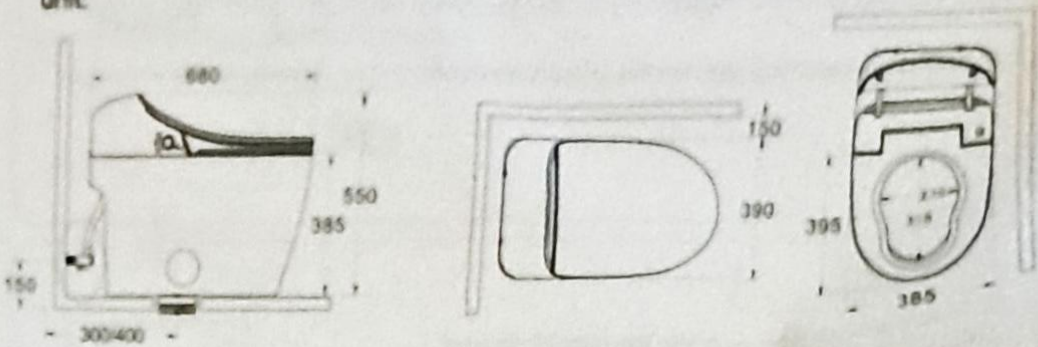

Notice before installation


1. Test water pressure: more than 1.32 gallons within 15 seconds.
2. Before installation, turn on the water pipe for 2 minutes and then connect to the inlet pipe.




Installation Steps

1. Draw a cross line on the output hole on the wall.


Cross line

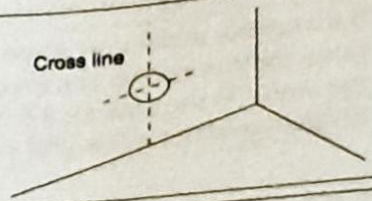


2. Install the water inlet valve on the wall.

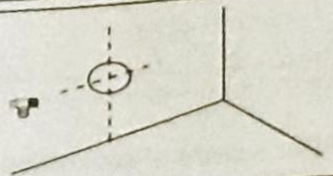


3. Open the water inlet valve and test the water pressure with a test bag.

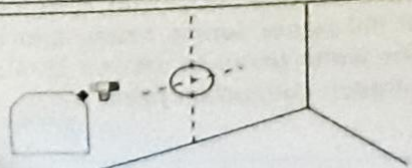

4. Open the water inlet valve and drain for 2-3 minutes to remove impurities in the water pipe.

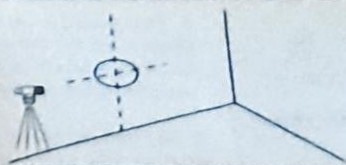

5. Install the wax ring pipe on the toilet outlet pipe.

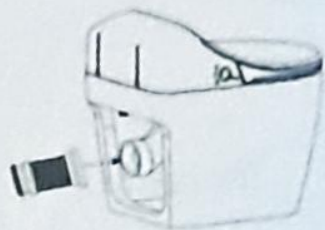

6. Put the wax ring pipe into the outlet hole and adjust the direction to be horizontal.




7. Use a wrench to lock nuts and other accessories to the retaining bolts. (from the top)

Note: You need to purchase the wax ring according to the position and size of the two bolt holes at the bottom of the ceramic.



Nuts
Gasket
Plastic screw washer

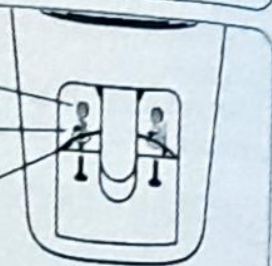

8. Install the water inlet angle valve and connect the dedicated hose (before connecting the dedicated hose, please release the water in the pipe for 3-5 minutes to ensure that the pipe is clean and the water inlet valve will not be blocked)

Water inlet angle valve
Dedicated hose



9. Put a circle of anti-mildew sealant on the contact between the toilet and the ground. After the sealant solidifies, plug in the power supply, slowly open the angle valve. Adjust the water pressure within 7.5KG, and check the sealing of each connection point.




Note

1. Smart toilet accessories have been commissioned, personal disassembly is strictly prohibited. Please use the fittings and hoses provided by our company. Old fittings and hoses cannot be reused. If have any questions, please contact local retailers or our after-sales service department.

2. All contents of this instruction manual are based on the latest conditions at the time of printing. We reserve the right to make changes without further notice.

Hose Connection And Installation

- 1 Install the new water inlet angle valve, connect the dedicated hose - end to the angle valve, and the other end to the filter housing
- 2 Plug in the power supply, adjust the angle valve to control the water pressure within 7.5kG

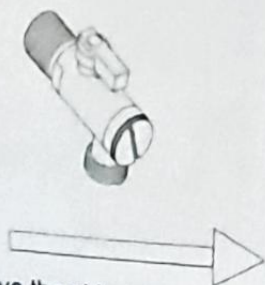

Remove the old water inlet angle valve and replace it with the new one

old water inlet angle valve

water inlet angle valve
dedicated hose




new water inlet angle valve

Note: The hose shall not be folded, otherwise it may cause the water pressure too low to operate the toilet.

Note:

1. In case of power failure during the cleaning process, please close the angle valve and stop the water supply. The function can be normal after the self-test when the power comes in.
2. Installation shall use the new hose assembly that comes with the apparatus and other parts specified in the apparatus. The old hose assembly cannot be reused, otherwise it may cause water leakage.

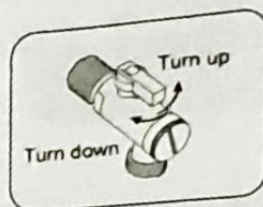


Adjust the angle valve



Turn off the angle valve

Remote Control Installation

Installation Method

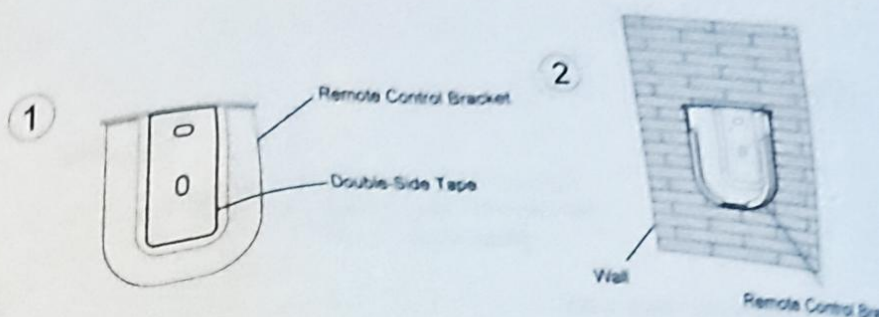

Note:

1. Clean the installation area before taping. Press the tape firmly and evenly when it is applied. Can be used after 15 minutes.
2. Double-side tape is suitable for tile-type flat walls, not for wallpaper-type walls.

Trial Run


1. Seating Sensor

The picture shown is the seating sensor area. Only when the system senses someone is seated, the function can be on. Then, the buzzer will "beep" once, indicating it has been sensed and the system can be activated. When the human body leaves the sensor place, the buzzer will also "beep" once.



2. Check Fundamental Functions

 When the human body sits on the sensor, the buzzer beeps. Press the "Rear" or "Bidet" button on the side control panel to operate.




Note: Functional test with water barrier cap.

3. Check the Drying Function


When the human body sits on the sensor, the buzzer beeps. Press the "Drying" button on the side control panel to operate.




Side Control Panel Instruction

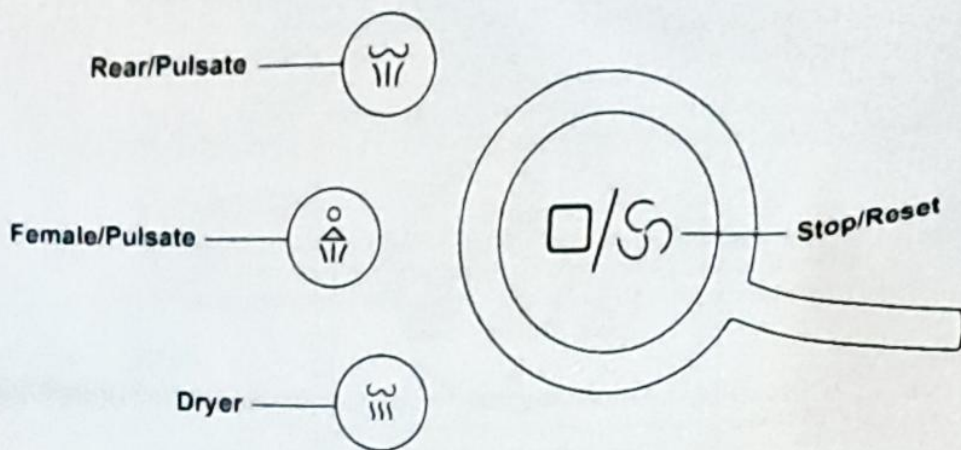

LED Display Screen Instruction

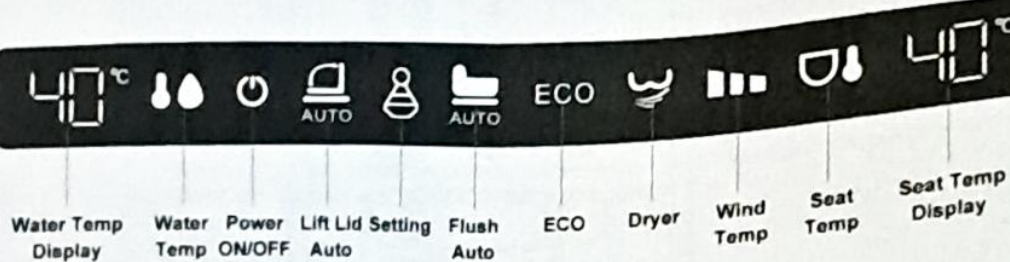

Remote Control Instruction

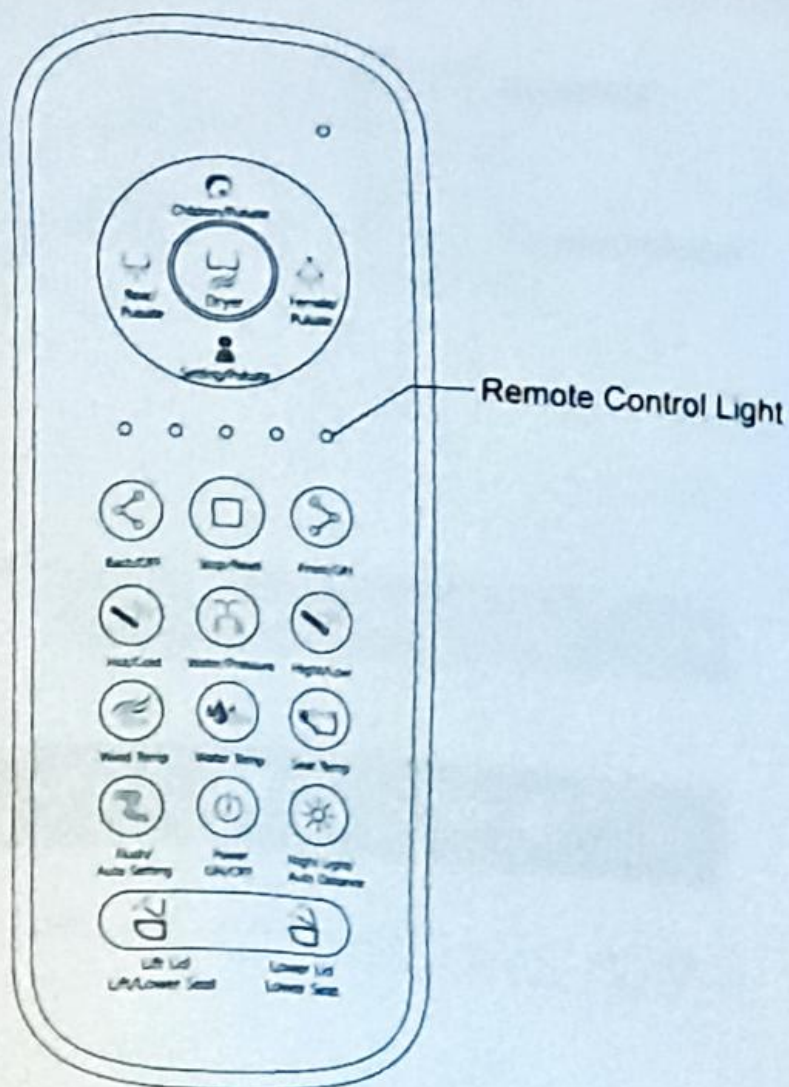

Notice: Remote Control pairing

The remote control pairing method: Long Press the toilet side button["Eject" + "Stop"] at the same time for 3-5 seconds and it will beep. Press any button on the remote control and then it will beep, which means pairing successfully.

Usage Instruction



Children/Pulsate

Children/Pulsate

The child cleaning mode is a setting mode and can be used without the seat being sensed seated. The default setting performs 90 seconds of medium warm water cleaning and 240 seconds of medium warm air drying. The temperature cannot be changed. Press repeatedly to switch between static and mobile cleaning. It supports adjusting the extension position of the spray rod and using the stop button to terminate the function. Other functions are also disabled during the execution of the child cleaning mode.



Rear/Pulsate

Rear/Pulsate

When seated, press once to start the cleaning, the regular cleaning time is 90 seconds, the drying time is 240 seconds, and press once again to start the mobile cleaning within 90 seconds, and press the Rear button again to stop the mobile cleaning. Rinse and dry with hot air after cleaning.



Dryer

Dryer

When seated, press once to start the hot air drying, the conventional drying time is 240 seconds, press the Wind Temp button to adjust the drying temperature, the remote control indicator from left to right indicates the wind temperature range from low to high, when no indicator is room temperature. The temperature gear is adjusted from normal temperature to the highest gear.



Female/Pulsate

Female/Pulsate

When seated, press once to start cleaning, the regular cleaning time is 90 seconds, the drying time is 240 seconds, and then press once again to start mobile cleaning within 90 seconds, and then press the Female button to stop mobile cleaning. Rinse and dry with hot air after cleaning.



Setting/Pulsate

Setting/pulsate

When using Rear or Female function, after adjusting the water temperature, water pressure, sprinkler position and drying position during cleaning, long press the setting button for 4 seconds, the top indicator and the fifth function indicator start to blink to save the current cleaning type, water temperature, water pressure, sprinkler position and drying position. For the next use, once seated, click the "Person" icon to use the saved cleaning type and gear.



Back/OFF



Front/ON

Position

Press the BACK and FRONT button to control the nozzle position. One light indicates the minimum spray position and five lights indicate the maximum nozzle position.



Stop/Reset

Stop/Setting

Press once to stop the running function. When no one is seated, press and hold the button for 4 seconds, the top indicator flashes, the prompt tone dings, and all functions are reset.



Hot/Cold

Hot/Cold

Press once to turn on the hot and cold massage function when in Rear or Female station. Press it again to close. Hot and cold massage function means in a cleaning cycle, the water temperature alternates between high and low massage.



Water/Pressure

Water Pressure

Press to adjust the water pressure. When all indicators are off, the water pressure is the lowest; when indicators 1 to 5 are on, the water pressure is increased; when all indicators are on, the water pressure is the highest.



High/Low

High/Low

Press once to turn on the high and low water pressure massage function when in Rear or Female station. Press it again to close. High and low massage function means during a cleaning cycle, the water pressure alternates between high and low.

Usage Method



Wind Temp

Wind Temp

Press the air temperature adjustment button, and the number of remote control indicator lights shows the heating gear: 0 light for room temperature, 1 light for about 40°C, 2 lights for about 45°C, 3 lights for about 50°C, 4 lights for about 55°C, 5 lights for about 60°C, and the air temperature refers to the temperature 5cm away from the air outlet. The display screen shows the air temperature gear: when all bar off, it's for room temperature, the first bar is on for gear 1, the first and second bars are flashing for gear 2, the first and second bars are on for gear 3, the three bars are flashing for gear 4, and the three bars are on for gear 5.



Water Temp

Water Temp

Press the water temperature adjustment button, and the number of remote control indicator lights shows the heating gear: 1 light for about 32°C, 2 lights for about 34°C, 3 lights for about 36°C, 4 lights for about 38°C, 5 lights for about 40°C.



Seat Temp

Seat Temp

Press the Seat Temp adjustment button, and the number of remote control indicator lights shows the heating gear: 1 light for about 32°C, 2 lights for about 34°C, 3 lights for about 36°C, 4 lights for about 38°C, 5 lights for about 40°C.



Flush/
Auto Setting

Flush/Auto Setting

Press this button to start flushing once.



Power
ON/OFF

Power ON/OFF

Long press the power button for 3 seconds to shut down the product, and press once to open it. When the software is powered off, the "⏻" lights. When the software is powered on, the "⏻" is off.



Night Light/
Auto Distance

Night Light

Press this button to turn on and off the night light and ambient Light.



Lift Lid/
Lift/Lower Seat

Lift Lid/Lift Seat

Press once to open the lid and again to open the seat ring.



Lower Lid/
Lower Seat

Lower Lid/Lower Seat

Press once to close the ring and lid. If the seat and lid are open for 5 seconds, the toilet will flush when the seat and lid are closed.



Rear/
Pulsate

Rear/Pulsate

When no one is seated, long press the Rear button on the remote control and make one prompt tones turn on the atomizing aroma for 5 seconds. When not seated, long press the Rear button on the remote control and make two prompt tones to turn off the atomizing aromatherapy.



Back/OFF



Front/ON

Ambient Light

When it is not seated and the light is on, press the button "⏪ ⏩" on the remote control to switch the atmosphere light mode: Off → Colorful change cycle → rainbow flow → white → red → blue → green → orange → purple → yellow → green → off. The toilet echoes with "ding ding ding" three times whenever the light mode setting switched. Press the button "⊗" on the remote control to turn off or turn on the atmosphere light individually.

Advanced Function

Microwave Sensor Switch (for Auto Lid Lifting)

- 1 Long press the nightlight button "☾" for 2 seconds to get into sensor distance setting mode.
- 2 Press the FRONT/ON "➡" to increase the sensor distance, and press the BACK/OFF "⬅" to decrease the sensor distance.

Note: The number of remote control indicator lights shows the Sensor distance level: 0 "●●●●●", microwave off, 1-5 "●●●●●", sensing distance increase in turn.

Energy Saving Mode Switch

- 1 Long press the Flush/Setting button "⌚" for 3 seconds to enter the setting, and the first function indicator of the remote control flashes "●●●●●".
- 2 Press the FRONT/ON "➡" to turn on energy saving mode, and the energy saving "ECO" on the LCD is on. Press the BACK/OFF "⬅" to turn off energy saving mode, and the Energy saving "ECO" on the LCD is off.
- 3 Press the Stop button "⏹" to save and exit the Settings.

Note: When energy-saving mode is ON, the seat temperature is at normal 25°C when not seated. The seat would be heated in accordance with the according gear for 3 minutes once it is seated, and then automatically turned on the avoiding low temperature scalding function and the seat temp would be maintained at 32°C until the user leaves and back to 25°C. When energy-saving mode is OFF, the seat should be heated at constant temperature according to the setting. When seated, the anti-low-temperature scald function will be automatically turned on, and the seat temperature will gradually drop to the low level at 32°C.

Automatic Flush Function Switch

- 1 Long press Flush/Setting button "⌚" for 3 seconds to enter the setting, and the first function indicator of the remote control flashes "●●●●●".
- 2 Short Press the Flush/Setting button "⌚" again to switch the setting, the second function indicator would blink "●●●●●".
- 3 Press the FRONT/ON "➡" to turn on automatic flushing, and automatic flushing "☑" on the screen is on. Press the BACK/OFF "⬅" to turn off automatic flushing, and automatic flushing "☐" on the screen is off.
- 4 Press the Stop button "⏹" to save and exit the Settings.

Note: Turn on automatic flushing. Flush automatically after leaving the seat. Turn off automatic flushing. Manually press the button to perform flushing.

Automatic Sensing Function

Microwave Sensing Flip Lid

When the human body approaches, the radar sensor triggers the cover to open automatically;

If you do not continue to operate the seat ring upping command, the toilet continues to recognize the residence time and automatically close the lid;

If it stays more than 5 seconds, the toilet lid will be closed automatically after 30 seconds; if it stays less than 5 seconds, the toilet lid will be closed automatically after 150 seconds;

If there is a command to continue the operation, the toilet continuously recognizes the residence time and automatically closes the cover and flushes;

When the seat cover and seat ring are both opened and the residence time is more than 5 seconds, the seat cover and seat ring will be automatically closed and flush after 30 seconds;

Suppose the residence time is less than 5 seconds. In that case, the cover and ring will be automatically closed and flushed after 150 seconds (this function only applies to products with automatic "Cover" and "Seat Cover").

Foot Sensing

When the seat cover is closed, when the human body approaches, the cover will be opened automatically; When the seat cover is opened, when the human body approaches, the seat ring will be opened automatically, more time to close the seat ring.


Note: Long press the Stop button for 4 seconds to reset all Settings to factory defaults.

⚠ The drying and cleaning function cannot be used in the non-sitting state.


Aromatherapy Adding Liquid Instructions

When there's no aromatherapy oil or if you plan not to use the aromatherapy function for a long time or the aromatherapy oil is used up, in order to protect the atomizer, please turn off the atomizer by pressing the hip wash button on the remote control when the toilet is not seated. The toilet shall beep twice by showing the atomizer is turned off.


1. Open the seat cover and remove the mini cover.

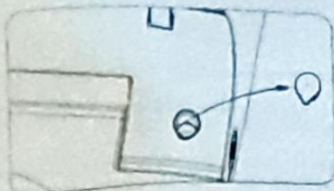


2. Use the plastic bottle (equipped) to fill it with water (maximum two bottles of water at a time).

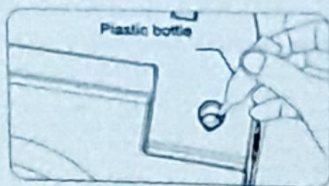

3. Add aromatherapy solution with an aromatherapy dropper (2 to 3 drops recommended).

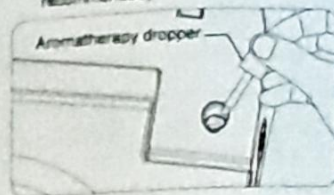

4. Put back the mini cover.

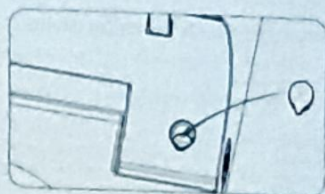

Remote Control Battery Replacement

When the battery runs out, the remote control maybe insensitive or out of control occasionally. Please replace the alkaline batteries immediately.

⚠ Note

The polarity of battery must be put in the right position and the compression spring extends from the negative pole.

- New and old batteries should not be mixed.
- Please use alkaline batteries.




Note: Remote control with batteries. Please appropriately store it in a location that is out of reach of young children.

Backup Battery Replacement

Steps

1. Unplug the power outlet.
2. Lift the toilet flip lid.
3. Open the battery cover.
4. Put the battery in the right position.
5. Press the "flush" button to ensure appropriate flushing.

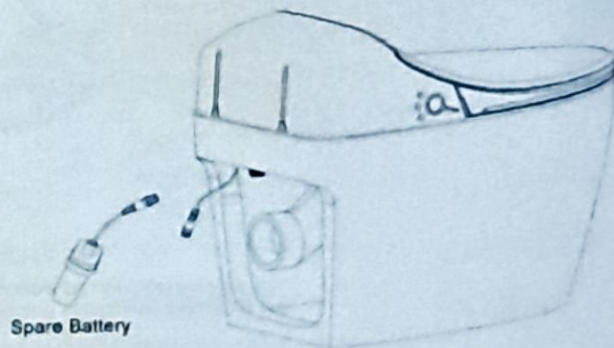

⚠ Note

1. The backup battery must be the 9V alkaline batteries. Do not use carbon or other batteries.
2. If the battery is low or not installed, it will cause an abnormal flush. And the flush function will be abnormal even if the power is off.
3. Recommend checking the 9V backup battery and replacing it with a new one every two years.
4. Please replace the old battery and recycle it appropriately.

Usage Instruction

Water Amount And Temperature

Due to the storage water heating mode, the water temperature will not decrease when cleaning for a long time. Although the water temperature may fluctuate, it doesn't affect the normal use.

Cleaning water will be controlled according to original setting temperature.

Normal spouting water without heat

Stage 1: about 32°C

Stage 2: about 34°C

Stage 3: about 36°C

Stage 4: about 38°C

Stage 5: about 40°C

Heating time depends on external water inlet temperature.

Installation with the Seat Sensor

When you are not seated and accidentally press the button, the spout will not operate due to the seat sensor. All cleaning functions will not be set when not seated.



The Seat Sensor

The seat sensor will not work if the following conditions occur:

The human body does not sit on the seat ring.

Environment usage instruction.

It is recommended that there should be no obstacle within 1.5m of the toilet, otherwise it will cause the flip lid to make wrong instructions.



Fault Judgement And Maintenance

Fault Judgement And Maintenance

Symptom	Inspection Method	Countermeasure
Does not start at all	Whether there is a power outage or the power outlet is not connected	Please make sure to insert the power plug. Please unplug and plug in again.
	Check whether the leakage protection power cord indicator is on	No. Please check the circuit to ensure that the external power supply is normal.
No water supply or wear water spouting	Whether water is stopped or the water supply valve is closed	Please check the water source and open the water supply valve.
	Whether the water supply filter is blocked	Please clean the filter.
	Whether the nozzle is clogged with scale	Please clean the nozzle with a toothbrush.
The Nozzle drips usually	Whether the water pipe is bent	Please smooth the water pipe.
	Check whether the cleaning water pressure is set at the appropriate level	Refer to the manual to adjust the water pressure level.
	Whether there is no water dripping after closing the angle valve	Clean the angle valve filter net or replace the screen valve.
Leak	Whether the water pipe connection part is tightened	Please tighten the water pipe connection.
Water temperature/ Cool seat	Whether the water temperature and cover temperature are adjusted to normal temperature	Please readjust the temperature.
Unable to use the wash and dry function	Check whether you sit in the seat sensor area	Yes, it still cannot be used, the seat sensor is faulty, replace the seat ring.
Cold air drying	Check that the heater is set to normal temperature	Refer to the manual to adjust the air temperature level.
	Whether the heater element is damaged	Replace drying components.
Abnormal flushing/ the sewage discharging does not work	Put around 2.1 Gall(8L) water into the toilet to check whether the sewage drainage pipe is blocked	If the sewage in the toilet cannot be discharged quickly after pouring water, the sewage drainage pipe may be blocked. Please clean the drainage pipe.
	Check whether the external water pressure is too low Check whether the angle valve filter net is clogged	Waiting for water supply to be restored. Clean angle valve filter net.
Normal water pressure with incomplete flushing	Check whether the sewage outlet is leaking	Install it again.
	Check if the S trap is blocked	Please use the plunger and other dredging tools to deal with it.
Normal water pressure with no flushing action	Whether the mainboard makes a beep sound when pressing the flush button	Yes. Replace the pulse valve and other flushing parts.
	Low battery power	No. Replace the mainboard or remote control and other related parts. Please replace the battery with a new one. Please refer to page 15 about remote control pairing.
Remote control cannot display	Recheck the code	Replace and install the new battery correctly.
	Check whether the remote control indicator is dimmed or off	No. Replace damping components.
The seat covering closed too fast	Whether the seat covering is restored to normal after being opened	Power on the toilet after plugging out for 1 minute.
Each function cycle runs in order	Check whether to enter project debugging mode	

Remote Fault Diagnosis

Operating through the toilet side button, you can check whether the flushing function and the trial run work appropriately. (Start the cleaning and drying function after seated.)



Emergency Fault Judgement

Under no water supply circumstance, put around 2.1 Gall(BL) water into a barrel and flush the bowl of ceramic.

Note: Avoid water spilling from bowl.




When the product is left unused for a long time

- Especially in winter when no one at home for a long time, please drain out the water inside the tank and the pipe to prevent freezing.

To Discharge Water

1. Unplug and cut off the electricity.
2. Unscrew the hose connector off angle valve, drain the water in the pipe and reinstall.
3. Handle the remaining water in ceramic body. It is suggested to put some antifreeze into water inside the ceramic body.

Tip: Make sure to turn on water angle valve and power supply when you use the toilet again.

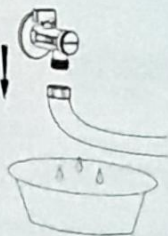

⚠ Note: Before water discharging, the power must be cut off.

Daily Maintenance

Main unit care and maintenance

1. Wipe the surface with a sponge or soft damp cloth or neutral detergent cloth.
2. **Note:** Do not use thinners, light gasoline, detergents, chemicals, etc. to wipe. Do not spray insecticides, aromatics, deodorants, etc.

Note: The material of the product is new plastic material, which is not discolored. Most of the discoloration phenomenon is oxidation reaction. Product contact with perfume, toilet cleaner, nail polish and other liquids, if not wiped off in time will cause product surface oxidation.

Some users may place a seat cushion on the seat ring with a heating function. Generally,

Spray nozzle maintenance and care

1. Lift the lid and seat ring.
2. While not sitting on the unit, short press the "Rear" Button on the side of the toilet, the spray nozzle will extend outward and water will flow out to clean the nozzle and the spout.
3. Use brush and soft cloth to clean.
4. After cleaning, press the "□" button to automatically retract the nozzle.

Maintenance of filter net

1. Turn off the water inlet angle valve and use a screwdriver to the left to unscrew the filter net.
2. Remove the filter net and use a brush to clean it. Reinstall the filter net into the water inlet angle valve.
3. Tighten the filter net and then turn on the angle valve.



Remove the filter net.



Rinse the filter dirt with water.

Technical Support


Name		Smart Toilet	
Power		AC 220V 50Hz	
Cleaning Device	Inlet Water Temperature	5-35℃	
	Inlet Water Pressure	0.15 - 0.75MPa	
	Warm Water Temperature	Adjustment normal - 40℃	
	Spray Water Amount	Rear	0.35-0.6L/Mn (When water pressure is 0.2MPa)
		Bidet (female-specific)	
	Spout Position	Rear	50mm-110mm
		Bidet (female-specific)	
	Heating Power		1600W
Safety Equipment		Flow Sensor, Water temperature sensor, Temperature switch, Thermal fuse	
Rated Power		1100W (inlet water temperature 15℃±2℃, water pressure 0.2MPa)	
Drying Device	Wind Speed	≥ 4m/s	
	Temperature Adjustment	6 stages (room temperature - about 60℃)	
	Heating Power	250W	
	Safety Equipment	Thermal controller, Thermal fuse	
Seat Heating Device	Temperature Adjustment	6 stages (room temperature - about 40℃)	
	Heating Power	45W	
	Safety Equipment	Thermal controller, Thermal fuse	
	Open And Close Device	Seat ring and flip lid with damping cushioning device	
	Safety Equipment	Leakage protector, The cover temperature sensor	
Power Cord Length		1.5m	

List of Materials

Main Unit



A Smart Toilet

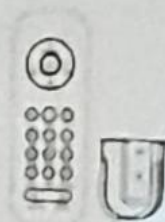

A Set Of Remote Control Components
include remote control, bracket, double-side
tape)



Flange Pipe



A Water Barrier Cap
(Please keep this accessory for functional testing)



An Installation Manual



Inlet Angle Valve



Quick mounting hole
decorative cap*2



battery box



Floor Mounting Bolt Kit